MODBUS TCP
Quick start guide for Windows®
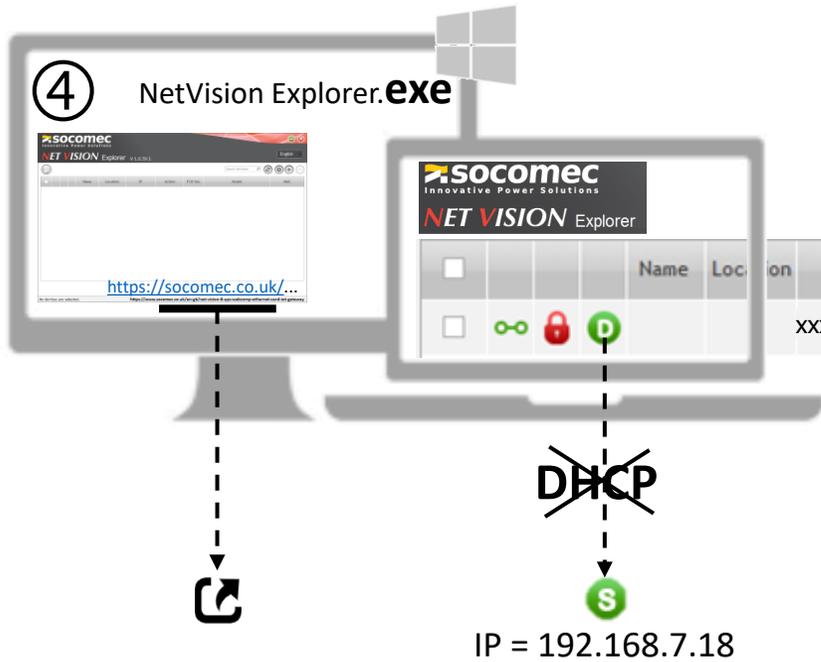
① socomec www
Technical support/Product software

② *Net Vision* 8

SOFTWARE

NET VISION 8: UPS WEB/SNMP Ethernet Card - IoT gateway

Professional network adapter for monitoring and controlling UPS from a remote location. IoT Gateway.

https://socomec.co.uk/en-gb/
net-vision-8-ups-websnmp-ethernet-card-iot-gateway

③ NetVision Explorer 🔧 + 📖

④ NetVision Explorer.**exe**

MODBUS TCP

Network | RS485

1000M | 100M Power Status | Reset | Setup
Restart

⑤

USB + HyperTerminal
COMx : 9600,N,8

xxxxxxFFC43A
3032316129

Login: **admin**
Password: **FFC43A**

LAN

☐			Name	Location	IP	Action	F/W Ver.	Model	MAC
☐	o—o 🔒 Ⓓ				xxx.xxx.xxx.xxx	🔍 e ⬆ ⬈	1.00	MODBUS Interface	xx-xx-xx-**ff-c4-3a** = example

DHCP

Ⓢ

IP = 192.168.7.18

⑥ Click e → Browse → http://IP → login → ⑦

admin →

Login
Username

FFC43A →

Password
Password

Connect →

⑧

Please Change Password

Enter New PASSWORD
Password

≥ 12 Char: **A-Z a-z 0-9 !%#@^***